


#43155 Replacement Parlor Style Pulsator for Surge , Standard Cover

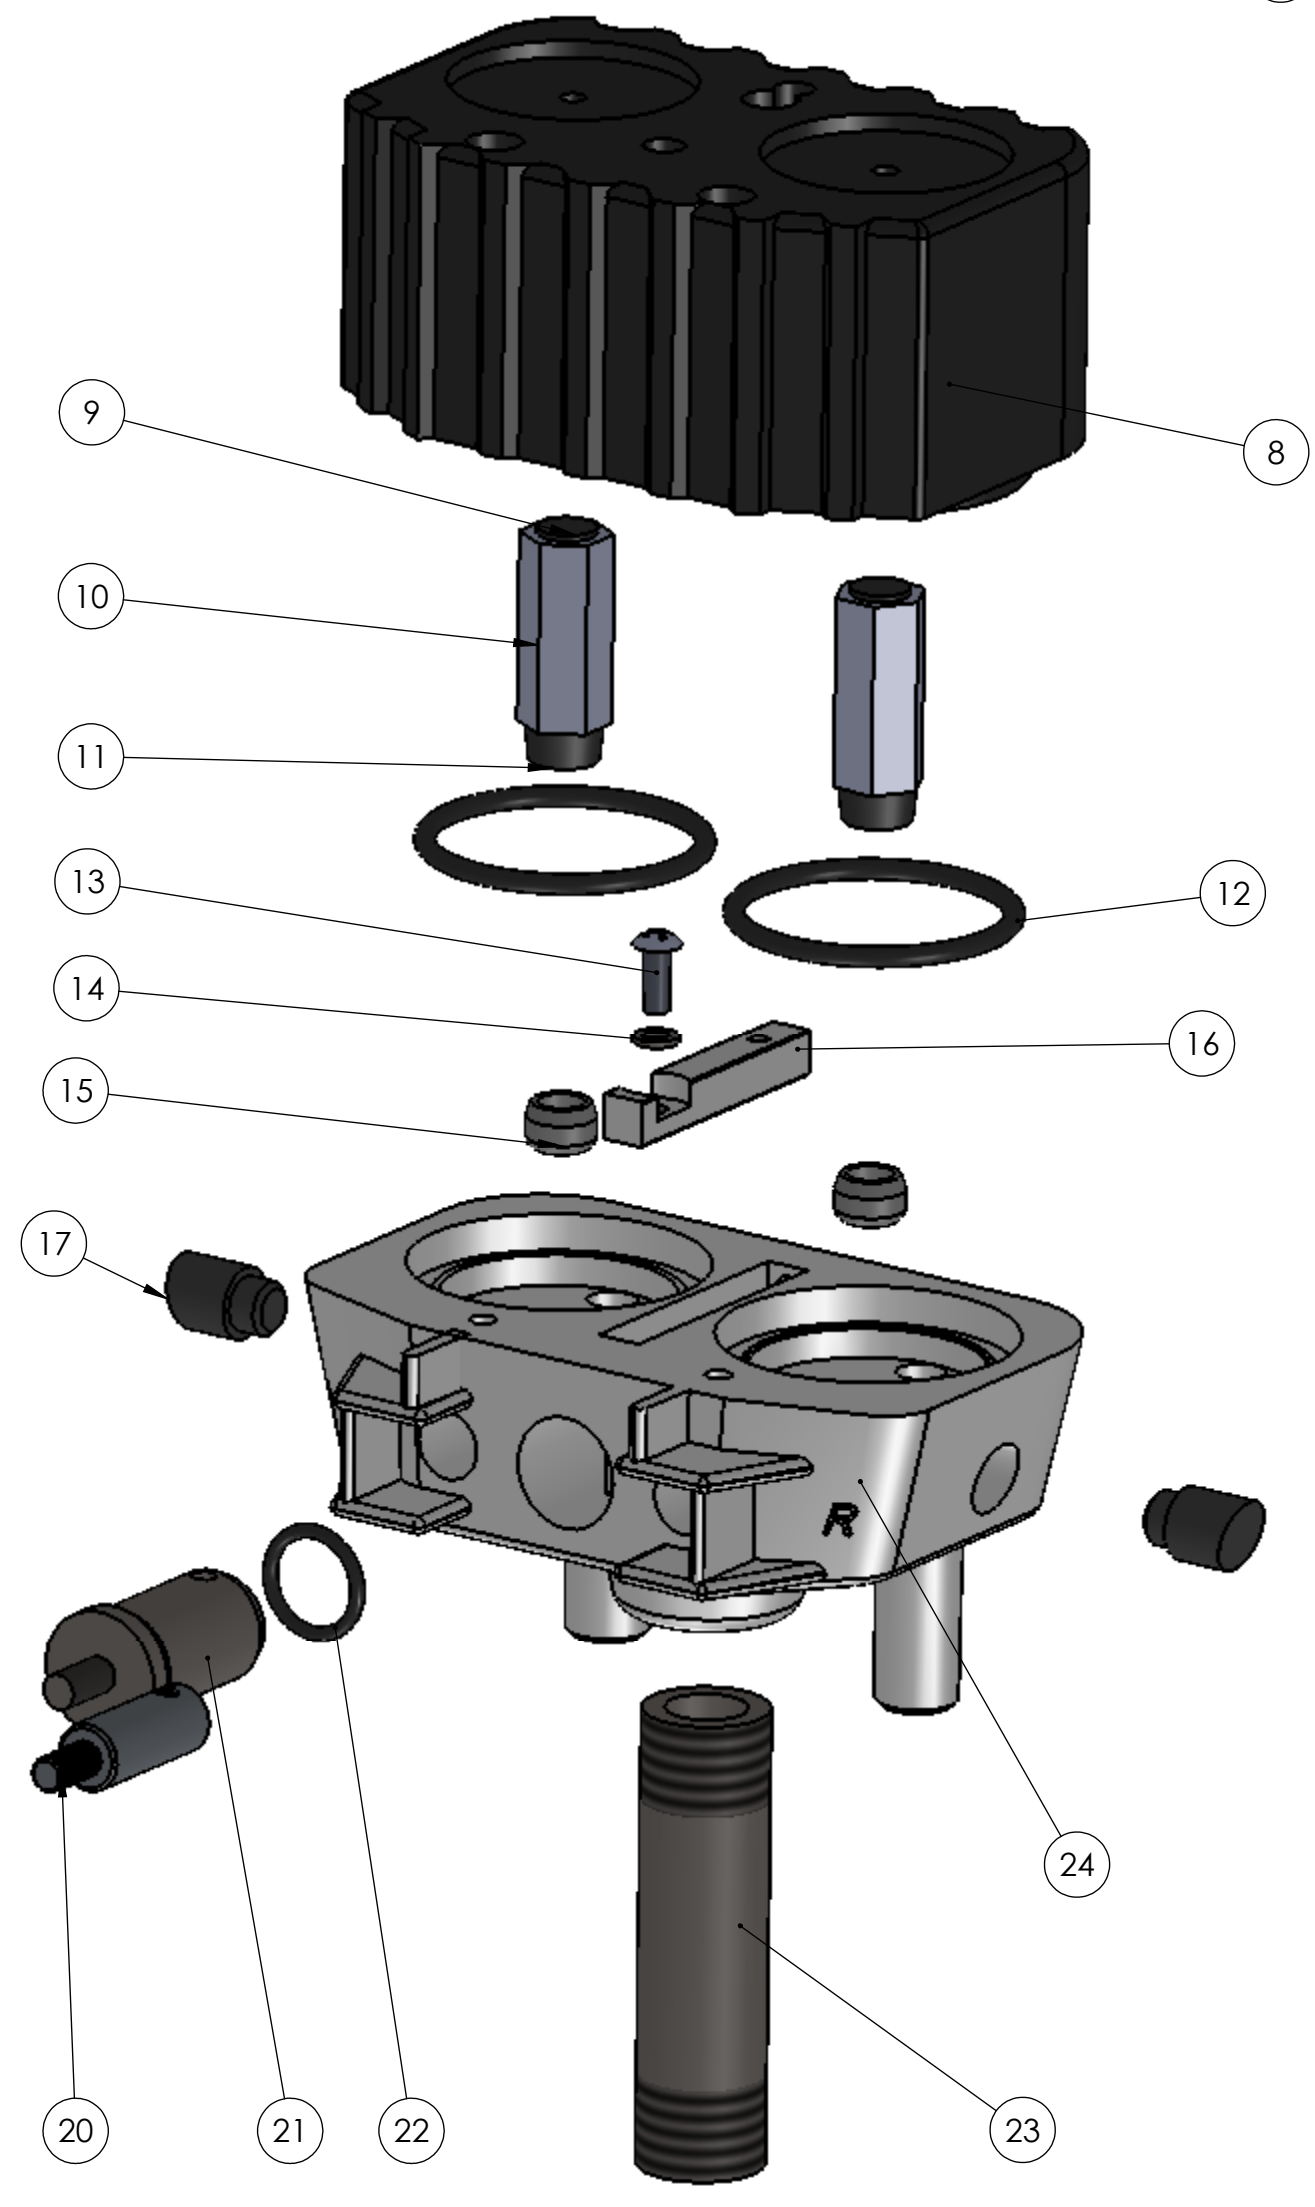

#43156 Replacement Parlor Style Pulsator for Surge , Fresh Air Cover

ITEM	PART NUMBER	DESCRIPTION	Qty.
1	43118	Replacement cover screw	2
2	43137	Replacement standard cover	1
3	10600	Replacement fresh air cover	1
4	43252	Replacement long screw	2
5	43253	Replacement short screw	1
6	10601	Replacement o-ring for fresh air cover	2
7	NS5492	Replacement lock washer	3
8	43115	Replacement black coil	1
9	43108	Replacement top plug	2
10	43104	Replacement piston (Includes #'s: 9-11)	2
11	43107	Replacement bottom cap	2
12	43102	Replacement o-ring	2
13	NS5510	Replacement screw for bridge	1
14	NS5492	Replacement lock washer	1
15	NS43150-2	Replacement S/S piston seat	2
16	NS43150-3	Replacement connector bridge	1
17	43171	Replacement rubber side plug	2
18	43149	Replacement knob	3
19	NS5481	Replacement washer	6
20	43125	Replacement side contact pin	2
21	NS43124	Replacement center contact pin	1
22	NS43150-7	Replacement center o-ring	1
23	43181	3/8" x 2.5" galvanized nipple	1
24	43157	Replacement Parlor Style Base Kit (Includes #'s: 13-24)	1
	43105	Replacement Repair Kit (Includes #'s: 9-12)	